


The enterprise has passed:
ISO9001 International Quality Management System Certification
本企业已通过:
ISO9001 国际质量管理体系认证

Joyoung

使用说明书
Operation Instruction Manual
不用手洗多功能破壁机
Hands-free Washing Blender
Y1-US02/Y1-US03

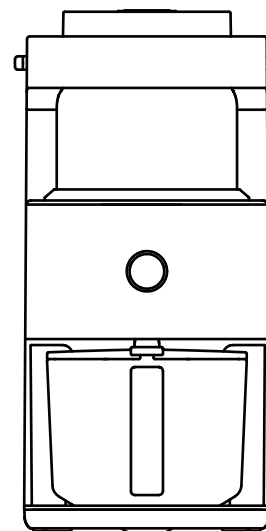

前言



感谢您选择我们的不用手洗多功能破壁机。我们编写本手册以帮助您安全、正确地使用和维护本产品。

使用前请仔细阅读本使用说明书，并妥善保管以供参考。

安全使用注意事项

安全使用

禁止

1. 本产品仅供家庭使用。
2.  请勿将本电器底座和电源线放入洗碗机中。
3.  切勿将底座浸入水或其他液体，或用水或其他液体冲洗，以免损坏本产品。
4. 请勿将本产品放在高温、强磁性材料附近，或置于天然气、甲烷等易燃易爆气体中。
5. 如果产品在工作过程中断电，重新通电后，请选择调速功能，将食材粉碎排出。切勿重新选择功能继续工作，否则会造成溢出。排净剩余食材后，请重新添加食材，选择您需要的功能。

警告

1. 请阅读所有说明。
2. 请勿触摸高温表面。请使用把手或旋钮。
3. 为防止触电，请勿将电源线、插头或机器浸入水或其他液体中。
4. 不使用时、拆卸部件前以及清洗前，请关闭机器电源，从插座中拔出插头。拔电源时，请用手握住插头并将其从插座中拔出。切勿拉扯电源线。
5. 机器通电工作时，严禁触摸刀片。
6. 请勿在电源线或插头损坏的情况下，或在机器发生故障、从高处跌落或出现任何形式的损坏后操作机器。请拨打客户服务电话联系厂商，了解有关检查、维修或调节的信息。
7. 使用非由厂商推荐或销售的配件可能引起火灾、造成触电或人身伤害。
8. 请勿在户外使用。
9. 请勿将电源线悬挂在桌子或柜台边缘，或使其接触灼热表面。请勿将机器放置在热气或电炉上或附近，或放置在加热的烤箱中。
10. 刀片锋利，请小心处理。

11. 搅拌时，请保持双手和用具远离搅拌杯，以降低对人员造成严重伤害或损坏破壁机的风险。可以使用刮刀，但仅限在破壁机不运行时使用。
12. 刀片组件锋利，可拆洗且未锁定。请小心轻放。处理刀片组件时，请始终握住轴。
13. 为避免在打开盖子的情况下倾倒时受伤，请小心刀片组件。
14. 务必在盖好盖子的情况下操作机器。
15. 在组装或拆卸部件之前以及清洗设备之前，务必先让机器冷却。
16. 切勿在机器运行时往搅拌杯内添加食材。
17. 移动装有热油或其他热液体的机器时，请务必格外小心。
18. 请勿将机器用于非预期用途。
19. 本产品不适合存在身体、感官或精神缺陷或者缺乏使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人密切监督并指导他们使用该设备。在儿童使用或靠近儿童使用该设备时，必须予以密切关注。必须对儿童进行监督，以确保他们不玩该设备。
20. 为持续确保无触电风险，限将电源连接到适当接地的插座。
21. 务必将电源插头完全插入插座。如果未完全插入，可能会因触电或过热而引发火灾事故。
22. 切勿尝试自行改装、拆卸或修理本产品。
23. 禁止对出浆口施以外力，以免损坏机器。
24. 禁止加工芒果、甘草或其他纤维过多的食材，以免捣不碎而堵塞出浆口，损坏机器。
25. 严禁使用非机器自带的接浆杯。
26. 本产品仅适用于家庭使用。
27. 维修（清洗或类似维修）应在机器与供电电路断开的情况下进行。
28. 搅拌热液体时，通风盖应留在搅拌杯盖上，避免堵塞。
29. 首次使用机器或者机器长时间闲置后，请选择“自清洗”功能。

请保存以上说明。

注意



1. 制浆过程中，请勿打开杯盖，以免烫伤。
2. 当室温高于30℃时，预约时间应不超过12小时。
3. 请勿将接浆杯放在明火上，或在电磁炉上加热。
4. 制作完成后，接浆杯、出浆口、搅拌杯和搅拌杯盖的温度很高，请勿用手直接触摸。
5. 搅拌杯内有未粉碎的食材需要排出时，请在操作界面选择调速功能，将未粉碎的食材捣碎后直接排出。
6. 制作饮品时，请严格按照食谱添加食材。
7. 自动清洗时，请勿断电。

8. 使用预约功能时，请注意倒数时间可能与标准预约时间略有差异，此为正常现象，不影响饮品质量。
9. 屏幕显示的制作时间可能与实际制作时间有偏差，此为正常现象。
10. 制作过程中，请勿强行取走接浆杯。
11. 如异常断电，请勿饮用异常断电设备制成的饮品。
12. 使用刷子手动清洗搅拌杯时，请小心刀片划伤双手。
13. 自动清洗前，请确保余水盒安放到位。
14. 往搅拌杯添加食材后，请将杯口边缘清理干净，以免无法合盖密封。
15. 请使用纯净水制作饮品。
16. 使用有色食材制作饮品时，机器可能会染色。
17. 本产品仅适宜在海拔2000米以下的地区使用。
18. 本产品仅适宜在温度介于4℃-40℃的环境中使用。
19. 使用有核食材时，制作前请先去核处理，比如枣核。
20. 机器的制作时间会根据海拔和电压自动调节。清洗完成后，请打开搅拌杯盖，晾干水分。
21. 制作含米类饮品时，搅拌杯内会轻微粘米，此为正常现象。
22. 机器通电工作时，请勿触摸刀片、电机等可拆卸部件，以免受伤或损坏机器。
23. 禁止空载（杯内无食材）或超载（食材量超过额定值）使用本产品。
24. 本产品仅适用于家庭用途。请勿将本产品用于其他用途。
25. 请勿用湿手插、拔电源插头，以免触电。断开电源时，请用手握住插头并将其拔出。请勿拉扯电源线；请勿用有锋利棱边、尖角等的物品触碰电源线，以免损坏电源线或造成漏电。
26. 使用本产品时，请将其放置于平稳表面。请勿将本产品放置在倾斜或不稳定的台面。请勿在地毯、毛巾、塑料、纸张等易燃物品上操作本产品，并请远离台面边缘，以免产品倾倒或发生其他事故。
27. 本产品调速功能仅适用于制作特殊食谱。
28. 严禁在操作过程中移动机器，以免食材溢出，造成烫伤或触电。
29. 如果电源线损坏，请联系厂商、厂商维修部门或类似部门的专业人员进行更换，以免发生危险。
30. 不使用时，请关闭开关、断开电源，以免产品发生短路。
31. 本产品以及与食品接触的部件材料均符合食品级认证，清洁、卫生、可靠。丢弃本产品和产品包装时，请交由有相关资质的部门回收。请剪断电源线并交由有相关资质的部门回收。
32. 在更换部件或接触活动部件之前，请关闭电源开关并断开电源。
33. 本产品的连续搅拌时间不得超过6分钟（各程序运行时间参考食谱说明和显示屏指示），并且每次制作后需停机1分钟；以上为一个周期。连续运行3个周期之后，必须断开电源，冷却15分钟后再运行，以保证产品的使用寿命。
34. 请将机器距墙或障碍物10cm放置，以避免机器或电机因出风口散热不良而停机。


使用提示

- 饮用豆奶之前，请确认豆奶已充分煮熟。
- 制作出饮品之后，请尽快饮用，以保持新鲜口感。
- 婴儿、肾功能不全以及胃肠功能弱的人应选择低浓度豆奶或减少饮用量。


部件和功能

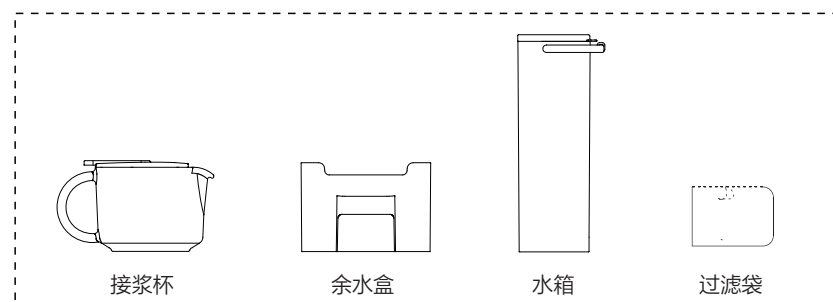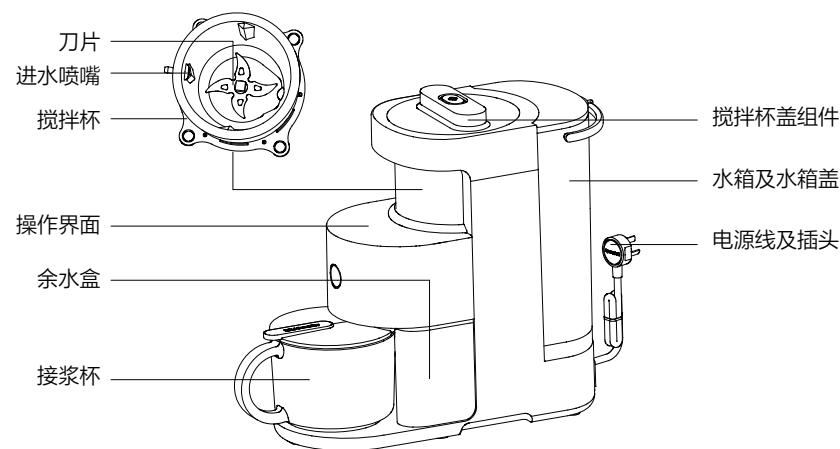


快速制作指南

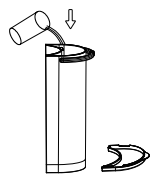

① 水箱中加入足量水

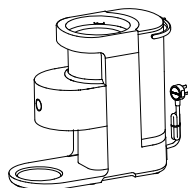


② 安装好水箱

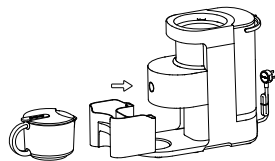

③ 放置好余水盒和接浆杯



④ 根据食谱用量，将食材加入搅拌杯并旋紧搅拌杯盖组件

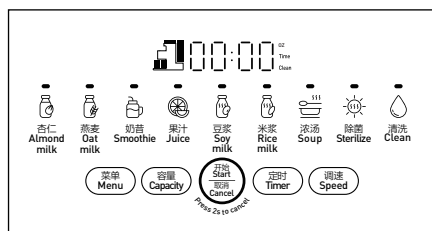


⑤ 接通电源，选择与食谱对应的功能和容量，触按“启动/取消”键，开始制作。

提示:

- 通电源，选择与食谱对应的功能和容量，触按“启动/取消”键，开始制作。
- 选择“奶昔”、“果汁”和“浓汤”功能时，机器不会自动加水。请将食材全部加入搅拌杯。
- 为确保品质，每一台机器出厂前均会接受上水检测。因此，杯体内可能会残留少量水分，此为正常现象。

- 制作过程中，请勿开盖，请勿触摸搅拌杯及蒸汽出口。
- 请勿使用纤维异常（长、粗、韧）的特殊食材，避免损坏陶瓷部件。
- 制浆完成后，机器会自动开始清洗，可取走接浆杯饮用。

快速使用

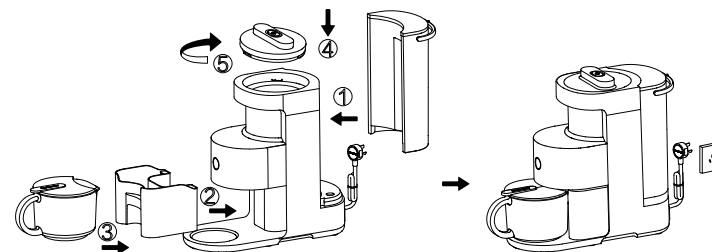


- ① 往水箱加入足量的水并安装到位。
- ② 将余水盒安装到位。
- ③ 再将接浆杯安装到位。
- ④ 食材放好后，将搅拌杯盖组件放置到对应位置，并按顺时针方向旋转到位。
- ⑤ 确认插头插牢且通电。

产品安全指标

额定电压	120V~
额定频率	60Hz
加热功率	1000W
电机功率	450W
额定容量	300mL-1000mL

如何使用

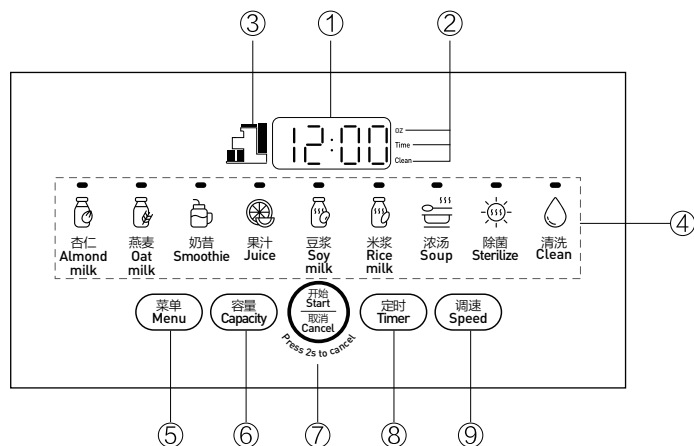


- 1. LED时间/容量显示
- 2. 状态显示
- 3. 异常提示
- 4. 一键通功能菜单
- 5. 功能选择键
- 6. 容量选择键
- 7. 启动/取消键
- 8. 预约按键
- 9. 调整按键

注意:

机器待机状态时间显示为北京时间（东八区时间），激活功能菜单后时间显示为工作时间。如需调整为本地时间，请同时触控“功能”键和“启动/取消”键，进入设置。设置完成后，请按“启动/取消”键结束。

操作指南

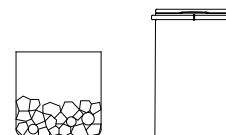

1. 添加食材和水

打开搅拌杯盖组件，加入食材；打开水箱盖，加水至所需制浆量水位线以上。合上水箱盖和搅拌杯盖组件。将接浆杯和余水盒安放到位。轻轻按压水箱，确保水箱放置到位。



2. 菜单选择

触控“功能”键，选择所需功能菜单。冷饮菜单包括：“杏仁”、“燕麦”、“奶昔”、“果汁”，热饮菜单包括“豆浆”、“米浆”、“浓汤”。



3. 容量选择

触控“容量”键，选择所需容量。



4. 启动功能

触控“启动/取消”键，机器开始工作。长按“启动/取消”键2秒可取消制作菜单，重新选择功能制作。进水后取消程序应选择“调速”功能，先将搅拌杯内食材粉碎后排出。



 
5. 自动清洗

制作完成后，机器将自动进入清洗程序，此时请勿取出余水盒。但接浆杯可自由拿取，清洗完成后及时处理余水。

注意事项:

- 1. 请按食谱用量添加食材，避免出现溢浆、出浆口堵塞、粉碎不良等状况。
- 2. 请勿放入芒果等纤维过多的食材，以免堵塞出浆口。
- 3. 制作果汁时，请勿添加过硬食材（如冰糖、冰块等），防止机器损坏。
- 4. 首次使用前，建议先使用清洗功能进行深度清洗。
- 5. 清洗过程中禁止取走余水盒。
- 6. 制作汤品时，请添加室温食材和液体，如水、牛奶、鸡汤等。

奶昔功能



1. 添加食材和水

根据需求往搅拌杯内添加食材和水。



2. 菜单选择

触按“功能”键，选择奶昔菜单。



3. 启动功能

触按“启动/取消”键，机器开始工作，长按“启动/取消”键2秒可取消制作。

调速功能



1. 根据需求往搅拌杯内添加食材和水或牛奶。
2. 触按“调速”键，进入调速功能，连接触按可选择档位，触按“启动/取消”键开始工作。
3. 调速档位分为L、1-9、H、A，档位越高，转速越大。


产品功能使用提示:

1. 选择“杏仁”、“燕麦”、“豆浆”、“米浆”和“清洗”功能时，机器会自动加水，切勿手动往搅拌杯内加水，否则容易溢出。
2. 选择“奶昔”、“果汁”和“浓汤”功能时，机器不会自动加水，请务必按食谱菜单添加食材
3. 调速功能为用户特殊食谱使用，机器不会自动加水，请务必加水或牛奶与食材一起搅拌。
4. 制作过程中长按“启动/取消”键2秒可取消制作。

时钟设置

长按“功能”和“启动/取消”键2秒，机器界面会显示“----”，按“功能”键加1个小时，按“容量”键加1分钟，设置完成后长按“启动/取消”键，完成时间设置。

预约功能

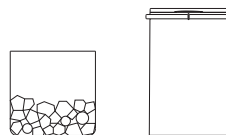

1. 添加食材和水

打开搅拌杯盖组件，加入食材；打开水箱盖，加水至所需制浆量水位线以上。合上水箱盖和搅拌杯盖组件。将接浆杯和余水盒安放到位。预约时，请确保搅拌杯内干燥再加入食材。



2. 菜单选择

触按“功能”键，选择想要预约的菜单。



3. 容量选择

触按“容量”键，选择想要的容量。



4. 时间选择

触按“预约”键，选择想要的时间，每按一次，时间增加15分钟。比如6点15分、6点30分，预约时间为制作完成的时间。



5. 启动预约

触按“启动/取消”键，完成预约；长按“启动/取消”键，可取消当前预约功能。

清洗/保养

热烘除菌



1. 杯体清洗后，触按“功能”键，选择除菌功能。
2. 触按“启动/取消”键，启动功能；若机器长时间未使用，使用前建议先使用“除菌”功能清洗。

搅拌杯快速清洗



触按“功能”键，第一次选择“清洗”功能菜单，显示8分钟后完成。触按“启动/取消”键，开始进入快速清洗功能。


搅拌杯深度清洗



触按“功能”键，第二次选择“清洗”功能菜单，显示30分钟后完成。触按“启动/取消”键，开始进入深度清洗功能。


保养

1. 机器使用约30次后，需要进行保养。建议在搅拌杯内加入适量茶垢清洁剂（约8克），选择“清洗”功能菜单，机器将进行保养清洗。每次清洗完成后，请将机器各处擦拭干净（特别是防溢电极处），并在晾干后再存放。茶垢清洁剂可在商店或网上购买。
2. 请定期对搅拌杯盖组件进行清理，从内部中心处往上推，将蒸汽阀取出，进行清洗。

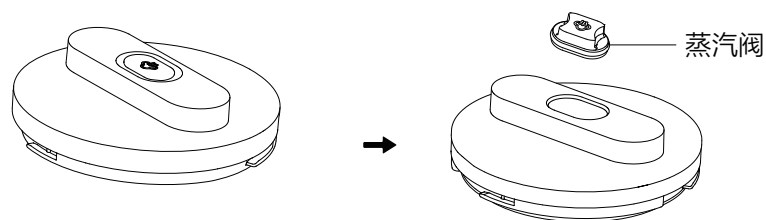


↑ 从内部中心处往上推

3. 请定期对出浆口进行清理，擦拭干净。

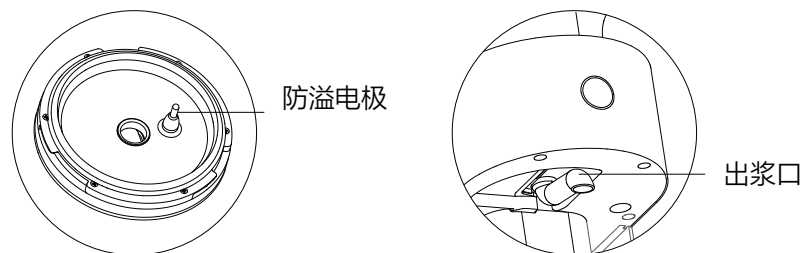

清洗配件

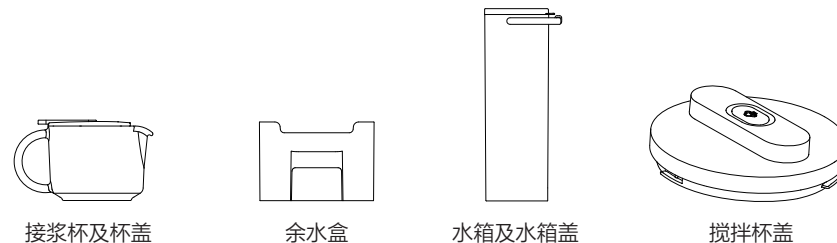

1. 以上4个配件应从机器上拆下，放在水龙头下冲洗！请勿将搅拌杯盖浸泡在水中清洗！
2. 食材过多或异常断电导致制作功能中断时，机器会启动自动进水，切勿再次选择相应功能进行二次制作！请选择“调速”功能，将搅拌杯内的食材粉碎后排出，机器进入自动清洗程序。
3. 制作饮品后，应时常对搅拌杯盖组件的蒸汽口进行清理，以免产生异味，滋生细菌。清洗后，要将搅拌杯盖组件甩干，避免内部进水。
4. 机器部件清洗干净后，建议擦干或风干后组装成整体，存放于干燥通风的地方。
5. 制作完成后，余水盒应及时清理干净，避免油脂或杂质残留。
6. 接浆杯、接浆杯盖、水箱、水箱盖及余水盒均可放入洗碗机清洗，其他配件则不可放入洗碗机清洗。

故障现象

故障现象	原因分析	解决方案
显示屏不亮	电源线未插好	将电源线插好
	长时间未操作，机器进入休眠模式	用手指轻触按键，唤醒机器
显示屏亮，但机器不工作	未选择功能程序	选择相应的功能程序
	水箱内未加水或旋转不到位	水箱加水至水位刻度线并放置到位

故障现象	原因分析	解决方案
搅拌杯内不进水	水箱座过滤网片堵塞	将过滤网片从水箱座取出，清洗后按原状放回
	机器内进水	请联系客服
触摸无反应	断电间隔短，系统未复位	断电2分钟后再通电使用
食材打不碎	食材太多或太少	请按食谱用量要求加入食材
	选错功能程序	正确选择功能程序
溢浆	选错功能程序	正确选择功能程序
	食材太多或太大	请按食谱用量加入食材
饮品加工时间过长，其他正常	水温过低	使用常温水
	选错功能程序	正确选择功能程序
浆液未正常排在接浆杯内	接浆杯放置不到位	将接收杯放置到位
废水未排在余水盒内	余水盒放置不到位	将余水盒放置到位
异常哨音	机器磨合	偶有哨音属正常现象
异常断电		通电后，整机复位。使用“调速”功能将腔内食材粉碎后排出。清洗后可重新添加食材进行制作

故障代码

报错提示：触摸屏上会显示报错提示和解决方案

异常代码	原因说明	建议对策
E00	防溢电极有食材粘连	清洗防溢电极
E01	过零信号丢失	产品故障，请联系客服
E02	搅拌杯未合盖	请旋紧搅拌杯盖
E03/E04	电压信号异常	家庭电压异常，请稍后再试
E05	E051 杯体温度传感器开路	产品故障，请联系客服
	E052 发热盘温度传感器开路	
E06	E061 杯体温度传感器短路	产品故障，请联系客服
	E062 发热盘温度传感器短路	
E07	E071 控制板与电源板通信异常	产品故障，请联系客服
	E072 转接板通信异常	
	E073 控制板与转接板通信异常	
E08	电机无电流	拔掉电源静置五分钟以上，重新开机，选择“调速”功能键，再触按“启动/取消”键操作，即可排出食材。”功能结束后，选择“自清洗”功能进行自动清洗。清洗完成后，请按食谱重新制作。若还有问题，请联系客服
E09	电机过载保护故障	请取出部分食材，重新制作
E10	加热模块故障	静置10分钟，然后重新打开电源。若故障还在，请联系客服
E11	电加热过载	请取出部分食材，重新制作。若故障还在，请联系客服
E12	待机状态有电流	产品故障，请联系客服

异常代码		原因说明	建议对策
E13		搅拌杯加热超时	请重新制作。若故障还在，请联系客服
E23		接浆杯未放置到位	接浆杯未放置到位，请检查接浆杯底部的磁铁是否还在
E24		余水盒未放置到位	清理余水盒并正确放回
E25		转阀转动故障	产品故障，请联系客服
E28		水泵抽水空抽	往水箱中加水至所需水位线以上
E33	E332	水泵异常	产品故障，请联系客服

提示:

如问题不能解决，切勿私自拆卸机器。请联系客户团队。另外，请严格遵循食谱食材比例操作，否则操作界面会显示E08错误。以上内容如因型号或零部件变更与实物不符，请以实物为准，恕不另行通知，敬请谅解。



PREFACE

Thank you for choosing our Hands -free Washing Blender. We have written this manual to aid you in using and maintaining this product safely and properly. Please read this manual carefully before using, and keep it for your reference.

IMPORTANT SAFEGUARDS

Safety use

Prohibition:

1. The product is designed for household use only.
2.  Do not put the appliance base and cable into dishwasher machine.
3.  Never immerse the base in or swash it with water or other liquid to prevent any damages to the product.
4. Do not place this product near high temperature, strong magnetic material, or in flammable or explosive gas such as natural gas, methane, etc.
5. If the product is powered off during the working process, after re-powering, please select the speed function to smash and discharge. Do not re-select the function to continue working, otherwise it will cause overflow. After that, add ingredients again and then choose the function you need.

Warning:

1. Read all instructions.
2. Do not touch surfaces that may be hot. Use handles or knobs provided.
3. To protect against risk of electrical shock, do not immerse cord, plugs, appliance in water or other liquid.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting blades at work.
6. Do not operate any appliance with a damaged cord plug after appliance malfunctions, dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. The use of attachments, not recommended or sold by the manufacturer may cause fire, electric shock or injury to persons.

8. Do not use it outdoors.
9. Do not let cord hang over the edge of tables or counters, or touch hot surfaces. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Blades are sharp. Handle carefully.
11. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
12. Blades assembly is sharp, removable and not locked in place. Handle with care. When handling blade assembly, always hold the shaft.
13. To avoid risk of injury, before pouring with the lid removed, be careful with the blade assembly.
14. Always operate blender with lid in place.
15. Always wait for machine to cool before cleaning the appliance.
16. Never add to container while appliance is operating.
17. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
18. Do not use appliance for other than intended use.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
20. To ensure continued protection against risk of electric shock, connect to properly earthed outlets only.
21. Insert the power plug firmly. If it is not fully inserted, it may be fire accidents caused by electric shock or overheating.
22. Never attempt to automatically modify, disassemble or repair this product.
23. DO NOT for external force to act on the nozzle to avoid damage to the machine.
24. DO NOT to process mango, liquorice and other ingredients with too much fibre, so as not to be crushed and clogged slurry nozzle, causing damage to the machine.
25. The use of non-original receiver cup is prohibited.
26. Household use only.
27. Servicing (cleaning or similar servicing) should be done with the appliance disconnected from the supply circuit.
28. Vented lid shall remain in place on the mixing cup lid when blending hot liquids and to avoid clogging.
29. Please run the "Clean" function first before using machine if it has been idle for an extended time.

SAVE THESE INSTRUCTIONS

Notice:

1. During the pulping process, please do not open the lid to prevent scalding.
2. When the room temperature is higher than 30°C, the appointment time should not exceed 12 hours.
3. It is strictly forbidden to heat the receiver cup on an open flame or induction cooker.
4. After the production is completed, the temperature of the receiver cup, the pulp outlet, the mixing cup, and the mixing cup lid are higher, please do not touch directly with your hands.
5. When there is operation in the mixing cup that needs to be discharged, please select the speed control function on the operation interface. Discharge directly after crushing.
6. When making drinks, please add ingredients strictly in accordance with the recipe.
7. Do not cut off the power during automatic cleaning.
8. When making an appointment, please note that the countdown time might be slightly different than the standard appointment time, it is a normal phenomenon and does not affect the quality of the drink.
9. The production time displayed on the screen may deviate from the actual production time, which is normal.
10. During the production process. Do not remove the receiver cup.
11. If the power is cut off abnormally, do not drink the prepared beverages.
12. When manually using a brush to clean the mixing cup, be careful of the blade causing injury to your hands.
13. Please make sure that the residual water container is in place before automatic cleaning.
14. After adding ingredients to the mixing cup, please clean up the ingredients around the mouth of the cup to avoid being unable to close the lid and seal it.
15. Please use pure water to make drinks.
16. When making coloured ingredients, the machine may be stained.
17. This product can only be used in regions below 2000 meters above sea level.
18. This product can only be used in an environment with a temperature of 4°C-40°C.
19. Please remove pits from ingredients with pits such as date pits.
20. The working timer will be automatically adjusted as per altitude and voltage. After cleaning, open the lid of the mixing cup to dry the water in the air.
21. When making drinks containing rice, it is normal for the rice to stick slightly to the mixing cup.
22. Do not touch the blade, motor and other detachable parts during product



energization and operation to avoid injury or product damage.

23. DO NOT to use this product with no load (no food in the cup) or overload (the amount of food exceeds the rated value).
24. This product is only suitable for household use, please do not use it for other purposes.
25. Do not insert or pull the power plug with wet hands to avoid electric shock. When powering off, manually hold the plug to pull it out, avoid pulling the power cord; Avoid touching the power cord with sharp edges, sharp corners, etc. to avoid damage or leakage.
26. When using this product, place it on a stable surface. Do not place on a sloping or unstable table. Do not operate this product on flammable materials such as carpet, towel, plastic, paper, etc., and keep it away from the countertop edge to avoid product dumping or accidents.
27. The speed control function of this product is only suitable for special recipe making.
28. During the operation process, it is strictly forbidden to move the machine to avoid overflow of food materials, which may cause burns and electric shocks.
29. If the power cord is damaged, in order to avoid danger, please contact the manufacturer, its maintenance department or similar department professional for a replacement.
30. When not in use, please turn off the switch and turn off the power to avoid short circuit.
31. This product and food contact parts of the material are in line with the food grade certification as clean, hygienic, reliable. Discard the product and its package and submit it to a qualified department for recycling. Cut the power cable and submit to the qualified department for recycling.
32. Turn off the power switch and disconnect the power supply before replacing the parts or contacting the moving parts.
33. The continuous blending time of this product shall not exceed 6 minutes (refer to the recipe instructions and display instructions for the running time of each program), and the machine shall be shut down for 1 minute after each blending; The above is one cycle. After 3 consecutive cycles of operation, the power must be disconnected, cooling and rest for 15 minutes before operation to ensure the life of the product.
34. Please place the machine 10cm away from any wall or obstruction to prevent the machine or motor from stopping due to poor heat dissipation at the air outlet.


Tip for use

- Make sure soy milk has been fully cooked before consuming.
- After making the drink, please drink it as soon as possible to maintain its fresh taste.
- Infants, people with renal failure, and weak gastrointestinal function should choose low-concentration soy milk or reduce drinking amount.


COMPONENTS AND FUNCTIONS

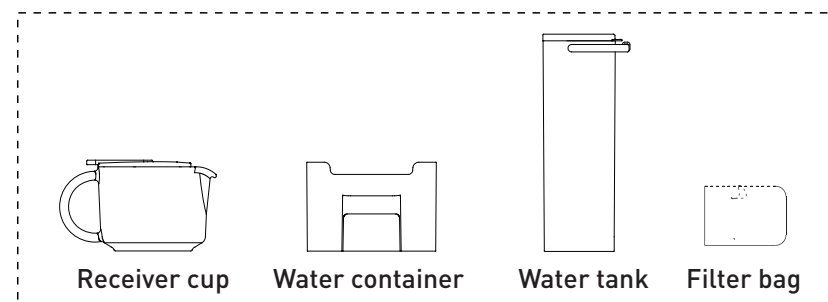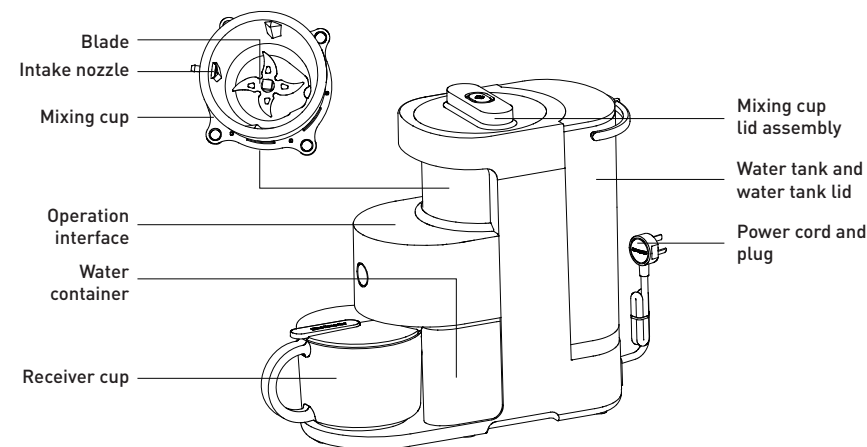


QUICK PRODUCTION GUIDE

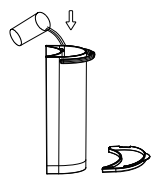

① Add sufficient amount of water to the water tank

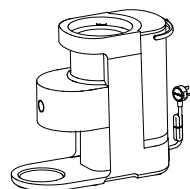


② Install the water tank

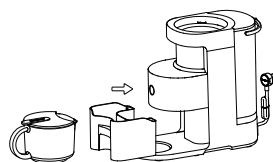

③ Insert the water container and the receiver cup



④ Add the ingredients in the mixing cup pursuant to the recipe amount and tighten the mixing cup lid component

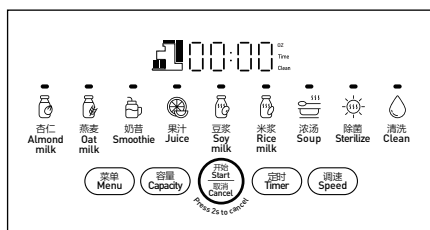


⑤ Turn on the power, select the function and capacity corresponding to the recipe, and touch the "Start/Cancel" key to start production.

! Tips:

- The functions of "Smoothie", "Juice" and "Soup" do not automatically add water. Please add all ingredients to the mixing cup.
- In order to ensure quality, each machine will be tested with water before leaving the factory. Therefore, the cup body may have a small amount of water left.

- During the production process, please do not open the lid, and do not touch the mixing cup and the steam outlet.
- Do not use special ingredients with abnormal fibers (long, thick, tough) to avoid damaging the ceramic parts.
- After the pulping is completed, it will automatically start cleaning and the receiver cup can be taken away for drinking.

QUICK USE

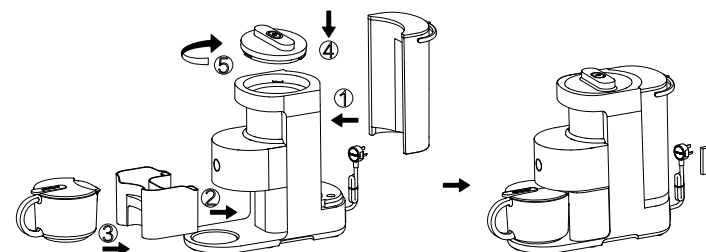


- ① Fill the water tank with sufficient water and install it in place.
- ② Install the water container in place.
- ③ Then install the receiver cup in place.
- ④ After placing the ingredients, place the mixing cup lid assembly to the corresponding position and rotate it clockwise.
- ⑤ Make sure that the plug is secure and powered.

PRODUCT SAFETY INDICATORS

Rated Voltage	120V~
Rated Frequency	60Hz
Heating Power	1000W
Motor Power	450W
Rated Capacity	300mL-1000mL

HOW TO USE

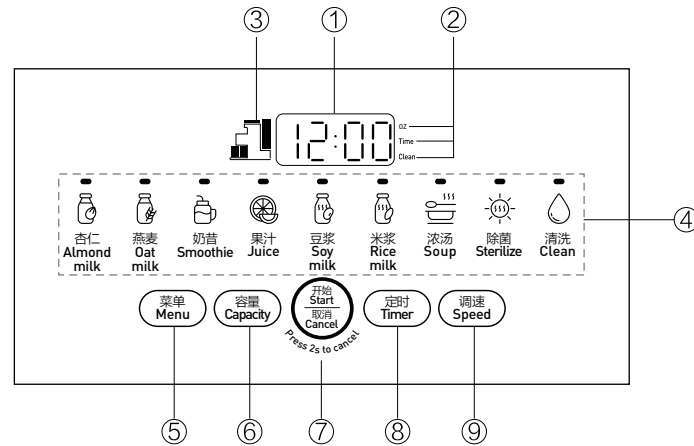


1. LED time/capacity display
2. Status display
3. Exception prompt
4. One touch preset functions
5. Function selection key
6. Capacity selection key
7. Start/Cancel key
8. Pre-set timer key
9. Speed control key

Note:


The time of the machine in standby mode is displayed as Beijing time (UTC +8), and the time after activating the function menu is displayed as working time. To adjust it to local time, please press "Menu" key and "Start/Cancel" key at the same time to enter the setting. After setting, press "Start/Cancel" key to finish.

INSTRUCTION OF USE

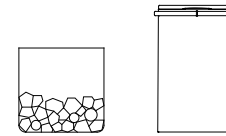


1. Add ingredients and water

Open the lid assembly of the mixing cup and add the ingredients; open the water tank lid and add water. Water needs to be above the minimum line of Drinking Level, close the water tank lid and the mixing cup lid. Then place the receiver cup and water container onto the exact position. Gently press the water tank to ensure that the water tank is in place.

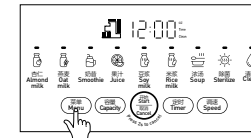

2. Menu selection

Touch "Menu" to select the function you want to reserve. Cold functions include: "Almond milk", "Oat milk", "Smoothie", "Juice", and hot functions include "Soy milk", "Rice milk", "Soup".

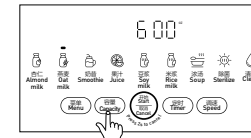

3. Capacity selection

Touch the "Capacity" key to select the desired capacity.



4. Start function

Touch the "Start/Cancel" key, the machine starts to operate, press "Start/Cancel" for 2 seconds to cancel the function and re-select the function. If you want to cancel the program after water enters the mixing cup, select "Speed" function instead, and wait till materials being smashed and discharged from the mixing cup.



 
5. Automatic cleaning

After the production is completed, the machine will automatically enter the cleaning program, please do not take out the water container. But the pulp receiver cup can be taken freely, and the remaining water can be processed in time after cleaning.

MATTERS NEEDING ATTENTION

1. Please add the ingredients according to the recipe quantity, so as to avoid overflow, clogging of the pulp nozzle, poor crushing, etc.
2. Do not put mango and other materials with too much fiber to avoid clogging of the pulp nozzle.
3. When making juice, please do not add excessively hard ingredients (such as rock sugar, ice cubes, etc.) to prevent damage to the machine.
4. It is recommended to use the cleaning button for deep cleaning before the first use.
5. DO NOT to take the water container out during the cleaning process.
6. When making soup, add ingredients and liquid to use at room temperature, such as water, milk, chicken soup, etc.

SMOOTHIE FUNCTION



1. Add ingredients and water

Add ingredients and water to the mixing cup as required.



2. Menu selection

Touch the "Menu" key to select the Smoothie function.



3. Start function

Press the "Start/Cancel", the machine starts to work, long press the "Start/Cancel" key for 2 seconds to cancel the production.

SPEED CONTROL FUNCTION



1. Add ingredients and water or milk to the mixing cup as required.
2. Touch the "Speed" key to enter the speed control function, press continuously to select the gear and touch the "Start/Cancel" key to start working.
3. The speed control gears are divided into L, 1-9, H, A, as gears increase gradually, speed increases as well.

Tips for using product features:

1. For "Almond milk", "Oat milk", "Soy milk", "Rice milk" and "Clean" functions machine will automatically add water, do not add water to the mixing cup, otherwise it will overflow easily.
2. "Smoothie", "Juice", "Soup" functions will not automatically add water, please be sure to add ingredients according to the recipe.
3. The speed control function is for users' special recipes, the machine will not automatically add water, please be sure to add water or milk stir with the ingredients.
4. Press and hold the "Start/Cancel" key for 2 seconds during work to cancel the production.


Clock Setting

Press the "Menu" and "Start/Cancel" key for 2 seconds, the interface displays "----", click "Menu" add 1 hour, click "Capacity" minus 1 hour, click "Timer" increase 1 minute, click "Speed" minus 1 minute, long press "Start/Cancel" after designing, complete the time setting.

PRE-SET

1. Add ingredients and water

Open the lid assembly of the mixing cup and add the ingredients; open the water tank lid and add water. The water need to be above the minimum line of Drinking Level, close the water tank lid and the mixing cup lid. Then place the receiver cup and water container onto the exact position. When making an appointment, please make sure that the mixing cup is dry before adding ingredients.

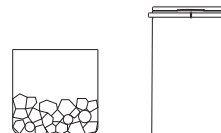



2. Menu selection

Touch the "Menu" key to select the desired function.




3. Capacity selection

Touch the "Capacity" key to select the desired capacity.



4. Time selection

Touch the "Timer" key, select the time you want, every time you press it, the time will increase by 15 minutes. For example, 6:15, 6:30, pre-set timer. The approximate time is when the production is completed.

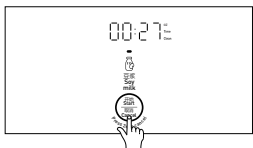


5. Pre-set timer

Touch the "Start/Cancel" key to complete the appointment; long press "Start/Cancel" key can cancel the current reservation function.


Clean / maintain

High temperature sterilization

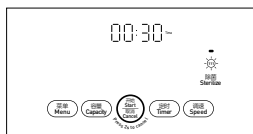


1. After the cup body is cleaned, touch the "Menu" key to select the "Sterilize" function.
2. Touch the "Start/Cancel" key to start the function; if the machine has not been used before, it is recommended to use the "Sterilize" function to clean.

Container fast clean

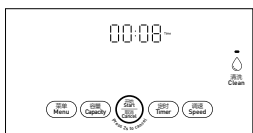

Touch the "Menu", and select the "Clean" function for the first time, it will display 8 minutes. Touch the "Start/Cancel" key to start the quick cleaning function.


Container inner wash

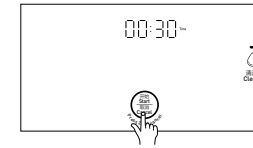


Touch the "Menu" key, select the "Clean" function for the second time, it will display after 30 minutes. Touch the "Start/Cancel" key to start the deep cleaning function.

Maintenance


1. After the machine has been used for about 30 times, it needs maintenance. It is recommended to add an appropriate amount of tea stain cleaner to the mixing cup (about 8g). select the "Clean" function, the machine will perform maintenance cleaning. After each cleaning is completed, please wipe all parts of the machine (especially the anti-overflow electrode) and dry it before storing. Tea stain cleaner can be purchased in stores or online.
2. Please clean the lid assembly of the mixing cup regularly, push up at the inner center, and take out the steam valve to clean.

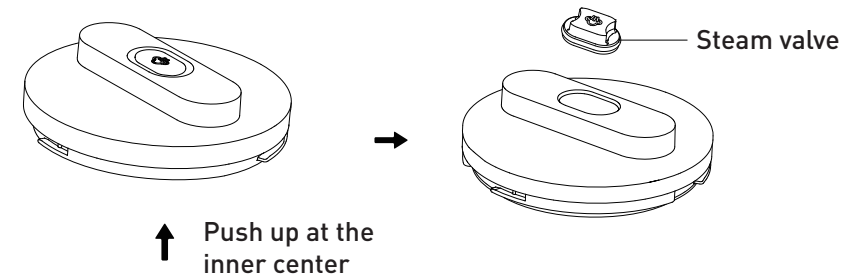


3. Please clean up the pulp outlet regularly.

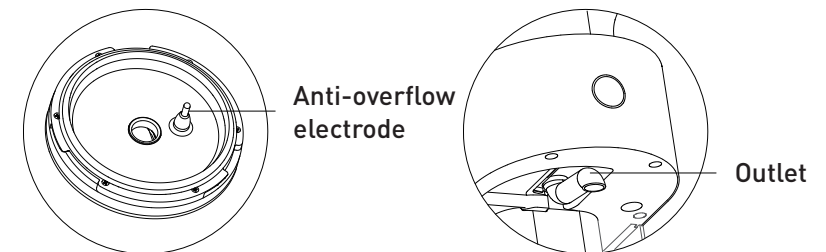

Cleaning accessories

 


Receiver cup and lid

 

Water container



Water tank and water tank lid

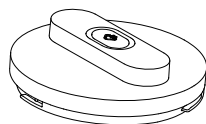

Mixing cup lid

1. The above 4 parts shall be dismantled from the machine and rinsed under tap water. Be sure not to soak the mixing cup lid in water for cleaning!
2. When the machine is interrupted in the making process due to excessive food or abnormal power failure, the finished materials will not be automatically discharged after the machine starts to automatically feed water. Please do not select all functions again, including the cleaning function! The "Speed" function should be selected to crush and discharge the food in the mixing cup, then the machine will enter automatic cleaning program.
3. After making the beverage, the mixing cup lid component shall be frequently cleaned to avoid peculiar smell or bacteria. The mixing cup lid component should be dried after cleaning to avoid water ingress.
4. After the machine parts are cleaned, it is suggested that the parts shall be wiped or dried to be assembled as the whole machine, which shall be stored in a dry and ventilated place.
5. After finishing the production, the water container plug shall be cleaned up timely, to avoid residual grease or unsmooth floating.
6. The receiver cup, receiver cup lid, water tank, water tank lid, and water container can be put into the dishwasher for cleaning, other accessories are not allowed.

Fault phenomenon

Fault phenomenon	Cause analysis	Countermeasure
The display does not light up	The power plug not properly plugged in	Plug the power adapter properly
	If the machine has not been operated for a long time, change to sleep mode	Touch the button with your finger to turn on the machine
The display is on and the machine is not working	No functional program selected	Select the corresponding function program

Fault phenomenon	Cause analysis	Countermeasure
The display is on and the machine is not working	No water is added in the water tank or not placed in place	Fill the water tank to the water level mark and secure it in place
No water in the mixing cup	Water tank filter at the bottom is clogged	Take the filter mesh out of the water tank and clean it, then return
	Leaking water in the machine	Please contact customer service
No response to touch	Short power-off interval, the system is not reset	Power off after 2 minutes and then power on again
Ingredients cannot be blended	Too many or too few ingredients	Add ingredients according to the recipes
	Selected wrong function	Correct selection of functional programs
Overflow	Wrong function program	Correct selection of functional programs
	Too many ingredients or too bulky ingredients	Add ingredients according to the recipes
Excessive beverage processing time, others are normal	Water temperature is too low	Use room temperature water
	Wrong function program	Correct selection of functional programs
Ingredients are not drained into the receiver cup properly	The receiver cup is not secured in place	Place receiver cup in the right place
Wastewater is not discharged in the water container	The water container is not in place	Place the water container in place
Abnormal noise	Machine running-in	Occasional noise is normal
Abnormal power failure		After power on, the whole machine is reset, use the speed control key to discharge the ingredients into the receiver cup and start again

Error code

Error prompt: display error prompt and solution on the touch screen

Exception code	Explanation	Suggested countermeasures
E00	Anti-overflow electrode has food sticking	Clean the anti-overflow electrode
E01	Zero crossing signal loss	Product failure, Please contact customer service
E02	The lid of the mixing cup is not closed	Please tighten the lid of the mixing cup
E03/E04	Abnormal voltage signal	Home voltage is abnormal, please try again later
E05	E051 Cup body temperature sensor open circuit	Product failure, Please contact customer service
	E052 Open circuit of heating plate temperature sensor	
E06	E061 Cup body temperature sensor short circuit	Product failure, Please contact customer service
	E062 Short circuit of heating plate temperature sensor	
E07	E071 Abnormal communication between control board and power board	Product failure, Please contact customer service
	E072 Abnormal communication on the adapter board	
	E073 Abnormal communication between control board and adapter board	
E08	Motor without current	After unplugging the power and letting it stand for more than five minutes, turn it on again and select the 'Speed' function key and then press the 'Start/Cancel' key to operate, so that the ingredients can be discharged. After the 'Speed' function ends, select the 'Clean' function for automatic cleaning. After cleaning, please remake according to the recipe. If there is still a problem, please contact customer service
E09	Motor overload protection failure	Please take out some ingredients and re-make

Exception code	Explanation	Suggested countermeasures
E10	Heating module failure	Leave it for 10 minutes and then power it on again. If the fault still occurs, please contact customer service
E11	Electric heating overload	Please take out some of the ingredients and make it again, If the fault persists, please contact customer service
E12	There is current in standby state	Product failure, please contact customer service
E13	Mixing cup heating timeout	Please remake, If the fault still occurs, please contact customer service
E23	The receiver cup is not in place	The receiver cup is not in place and please check whether the magnet at the bottom of the receiver cup is missing
E24	The water container is not in place	Clean the water container and put it back correctly
E25	Rotary valve rotation failure	Product failure, please contact customer service
E28	Water tank emptying	Add water to the water tank above the required water level
E33	E332 Pump Abnormal	Product failure, please contact customer service

Warm tips: If the problems can't be solved, please do not dismantle machine by yourself. Please contact customer service team. In addition, please strictly follow the recipe ingredients ratio to operate, otherwise the operating interface will show E08 error. If the above contents are inconsistent with the physical object due to the change of model or parts, the latter shall prevail, without prior notice. Please understand.