


本企业已通过：
ISO9001国际质量管理体系认证

The enterprise has passed：
ISO9001 International Quality Management System Certification

Joyoung

不用手洗多功能破壁机
Hands-free Washing Blender
使用说明书
Operation Instruction Manual
L12-Y521-US02/L12-Y521-US03

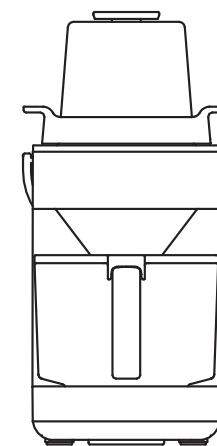

前言

感谢您选择我们的不用手洗多功能破壁机。我们编写本手册以帮助您安全、正确地使用和维护本产品。

使用前请仔细阅读本使用说明书，并妥善保管以供参考。

安全使用注意事项

安全使用

禁止

1. 本产品仅供家庭使用。
2. 请勿将本电器底座和电源线放入洗碗机中。
3. 切勿将底座浸入水或其他液体，或用水或其他液体冲洗，以免损坏本产品。
4. 请勿将本产品放在高温、强磁性材料附近，或置于天然气、甲烷等易燃易爆气体中。

警告

1. 阅读所有说明。
2. 请勿触摸高温表面。请使用把手或旋钮。
3. 为防止触电，请勿将电源线、插头或机器浸入水或其他液体中。
4. 在儿童使用或靠近儿童使用任何电器时，必须密切监督。
5. 不使用时和清洗前请拔下电源插头。待机器冷却，再安装或拆除部件。
6. 请勿在电源线或插头损坏的情况下操作机器，或在机器发生故障或以任何方式损坏后操作机器。
7. 鉴于附件可能造成人身伤害，厂商不建议使用附件，包括罐装瓶。
8. 请勿在户外使用。
9. 请勿将电源线悬挂在桌子或柜台边缘，或使其接触灼热表面。
10. 请勿将机器放置在热气或电炉上或附近，或放置在加热的烤箱中。
11. 移动装有热油或其他热液体的机器设备时，必须格外小心。
12. 务必先将插头连接到机器，再将电源线插入壁装插座。要断开连接，请将任何控件转至“关闭”，再从壁式插座上拔下插头。
13. 请勿将机器用于非预期用途。
14. 请勿尝试强行打开任何安全互锁机件。

15. 本产品不适合存在身体、感官或精神缺陷或者缺乏使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与使用机器相关的监督或指导。请注意，禁止儿童玩耍本产品。
16. 请使用三插插座，并确保可靠接地。务必选用额定电流不低于10A，交流电压为120V的电源插座。
17. 务必将电源插头完全插入插座。如果未完全插入，可能会因触电或过热而引发火灾事故。
18. 请勿将机器用于说明书所载之外的用途。
19. 切勿尝试自行改装、拆卸或修理本产品。
20. 请勿将本产品浸入水中，或用水冲洗。
21. 请勿对出浆口施以外力，以免损坏机器。
22. 禁止加工芒果、甘草或其他纤维过多的食材，以免堵塞出浆口，损坏机器。
23. 严禁使用非机器自带的接浆杯。



注意

1. 请勿在制作过程中或出浆未完全排出时打开搅拌杯组件，以免溢出烫伤！
2. 在室温高于30℃时，预约时间请勿超过12小时。
3. 请勿将接浆杯放在明火上，或在电磁炉上加热。
4. 制作完成后，接浆杯、出浆口、搅拌腔体和搅拌杯组件的温度很高。请勿用手直接触摸。
5. 搅拌腔体内有未粉碎的食材需要排出时，请在主界面选择“调速”功能，将未粉碎的食材直接排出。
6. 制作饮品时，请严格按照食谱加料。
7. 自动清洗时，请勿断电。
8. 预约时间与实际制作时间略有差异，属正常现象，不影响饮品质量。
9. 实际制作时间与屏幕显示的制作时间可能存在偏差，属正常现象。
10. 制作过程中，请勿强行取走接浆杯。
11. 请勿饮用由故障机器制成的饮品。
12. 自动清洗前，请确保余水盒安放到位。
13. 搅拌腔体内加料后，请将腔体边缘清理干净，以免无法合盖密封。
14. 使用有色食材制作时，可能会染色。
15. 本产品仅适宜在温度4℃-40℃的环境中使用。
16. 对于有核食材，制作前请先去核处理。
17. 制作时间会根据海拔和电压自动调整。自动清洗完成后，打开搅拌杯组件晾干。
18. 制作含米类饮品时，搅拌腔体内会轻微粘米，属于正常现象。
19. 机器通电工作时，严禁触摸刀片、电机等可动部件，以免受伤或损坏机器。
20. 禁止空载（杯内无食材）或超载（食材量超过额定值）使用本产品。
21. 本产品仅适用于家庭使用。请勿将本产品用于其他用途。

22. 请勿用湿手插、拔电源插头，以免触电。断开电源时，请用手握住插头并将其拔出。请勿拉扯电源线。请勿用有锋利棱边、尖角等的物品触碰电源线，以免损坏电线和漏电。
23. 使用本产品时，请将其放置于平稳台面。请勿在倾斜或不稳定的台面上，或在靠近地毯、毛巾、塑料、纸张等易燃物品的地方操作本产品，并请远离台面边缘，以免产品倾倒或发生其他事故。
24. 严禁在制作过程中移动机器，以免食材溢出，造成烫伤或触电。
25. 如果机器在制作过程中出现断电，请在重新通电后选择“调速”功能，粉碎和排出食材。清洗后更换食材，切勿重新选择功能继续制作，否则会造成溢出。
26. 如果电源线损坏，必须由制造商的专业人员更换，以免发生危险。
27. 不使用时，请关闭开关、断开电源，以免产品发生短路。
28. 本产品与食品接触的部件材料均符合食品级认证，清洁、卫生、可靠。
29. 丢弃本产品和产品包装时，请交由有相关资质的部门回收。丢弃时请剪断电源线。
30. 本产品的运行速度已设置为理想状态，不需要进行调校。
31. 在拆卸、安装、调校或清洗本产品的任何部件之前，请关闭开关、断开电源，以免产品漏电或意外启动。
32. 在更换部件或接触活动部件之前，请关闭电源开关并断开电源。
33. 本产品的连续研磨时间不得超过6分钟（各程序运行时间参考食谱说明和显示屏指示），每次制作后需停机1分钟；以上为一个周期。连续工作3个周期后，必须断开电源，冷却15分钟后再运行，以保证产品寿命。
34. 机器必须远离火源30cm以上，以免机器受损或发生火灾。
35. 玻璃搅拌腔体容易破碎，请小心使用、轻拿轻放。如发现破损，请立即停止使用，以免发生危险。
36. 杯盖或进料盖上的气孔必须清洗干净，严禁堵塞气孔，以免发生溅水等事故。
37. 大块或长条食材应切成小块，或根据食谱的要求进行处理。
38. 制浆时请勿将机器靠墙放置。
39. 不使用时、装卸部件前以及清洗前，请拔下电源插头。指示灯闪烁表示准备制作。避免不慎接触触摸屏。
40. 搅拌时，请保持手和用具远离容器，以降低对人员造成严重伤害或损坏破壁机的风险。可以使用刮刀，但仅限在破壁机不运行时使用。
41. 刀片组件锋利，未锁定且可拆洗。请小心轻放。处理刀片组件时，请始终握住轴。为避免在打开盖子的情况下倾倒时受伤，请小心刀片组件。
42. 务必在盖好盖子的情况下操作机器。
43. 在组装或拆卸部件之前以及清洗设备之前让其冷却。
44. 切勿在机器运行时往搅拌杯内加食材。
45. 操作机器前，搅拌杯必须正确安放到位。
46. 为保证豆浆口感，请将干豆浸泡时间控制在8小时内，请勿过长时间浸泡，否则会出现溢浆现象。

请保存以上说明。


部件和功能

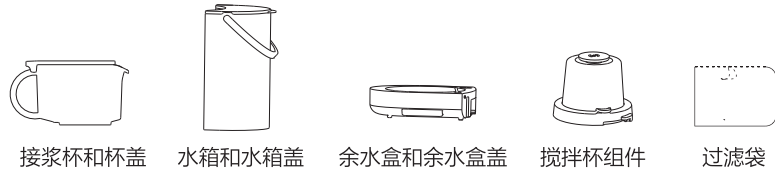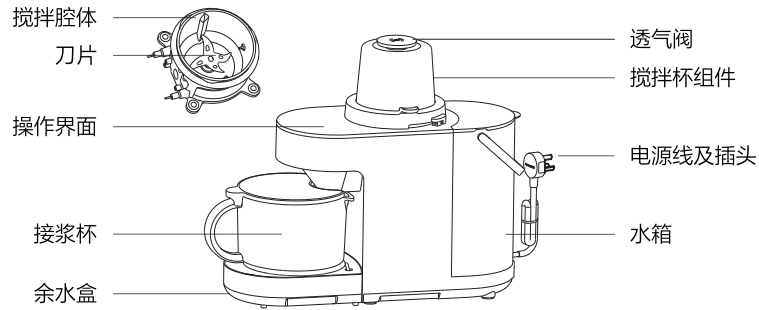

快速制作指南

安装说明

- ① 将水箱加水至所需制浆量水位线以上，盖上水箱盖，按指示安装到位；
- ② 将余水盒安装到位；
- ③ 再将接浆杯和杯盖安装到位；
注意：杯子的把手要朝外，否则无法感应到底部磁铁。
- ④ 加入食材后，将搅拌杯组件置到对应位置（顺时针旋至对位标记对齐）；

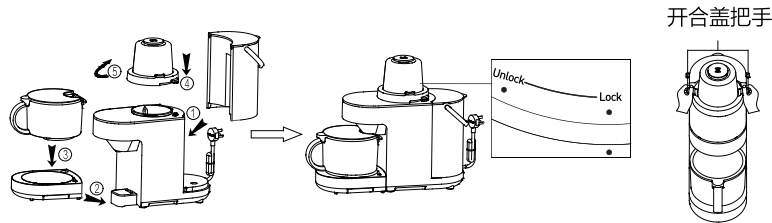


- ⑤ 制浆完成后，机器进入自清洗过程。
请取下接浆杯。

产品安全指标

额定电压	120V~
额定频率	60Hz
加热功率	1000W
电机功率	450W
额定容量	300mL-1200mL

如何使用

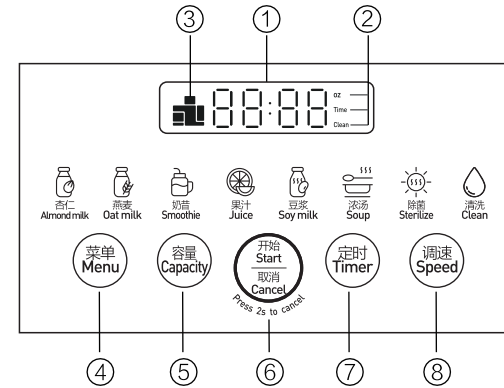


1. LED时间/容量显示
2. 状态显示（Oz、预约、自清洗）
3. 异常提示
4. 功能选择键
5. 容量选择键
6. 启动/取消键
7. 预约按键
8. 调速按键

注意:

机器待机状态显示为 --:--，启动功能后时间显示工作时间。

使用说明

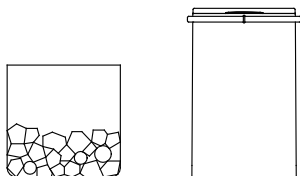


1. 安装整机

按照安装说明组装整机；

2. 加入食材和水

打开搅拌杯组件，加入食材后合上搅拌杯组件，并顺时针旋转至对位标识对齐。

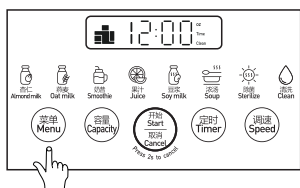

3. 选择功能

触按“功能”键，选择所需功能。

4. 容量选择

触按“容量”键，选择所需的容量。

5. 启动功能

触按“开始/取消”键，机器开始工作。

启动功能10秒内触按“开始/取消”键，可取消制作。之后可重新选择功能制作。

启动功能10秒后长按“启动/取消”键2秒以上可取消制作。此时机器会进入自动清洗模式。


注意:

1. 请按食谱中规定的量添加食材，以免果浆溢出、出浆口堵塞或破碎效果不佳；
2. 请勿加工芒果等纤维过多的食材，以免堵塞出浆口；
3. 制作果汁时，请勿添加坚硬的食材（如冰糖、冰等），以免损坏机器；
4. 首次使用机器时，建议选择“清洗”功能进行深度清洗；
5. 自动清洗过程无法取消。如需取消，必须断开机器电源5分钟以上；
6. 如遇浆液未完全排出，请确保机器冷却后再清洗，以免烫伤！

产品功能使用提示:


1. 选择“豆浆”、“杏仁奶”、“燕麦奶”、“杀菌”功能时，机器会自动加水。请勿往搅拌腔体手动加水，否则容易溢出；
2. 选择“果汁/奶昔”、“汤”功能时，机器不会自动加水。请务必按照食谱中的说明添加食材；
3. 选择“调速”功能时，机器不会自动加水；
4. 机器工作时长按“开始/取消”键2秒，可取消进程。

果汁/奶昔功能

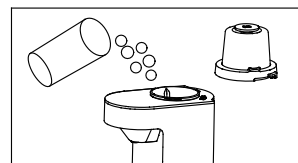


1. 加入食材和纯净水

选择“果汁/奶昔”功能时，请根据需要将食材和纯净水或牛奶加入搅拌腔体。

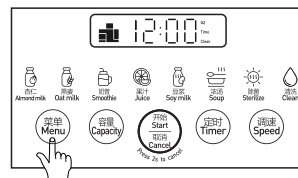

2. 选择功能


触按“功能”键，选择“果汁”/“奶昔”功能。

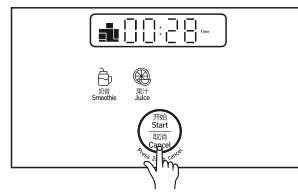


3. 启动功能

触按“开始/取消”键后，机器会开始制作。长按“开始/取消”键2秒，可取消制作。

除菌

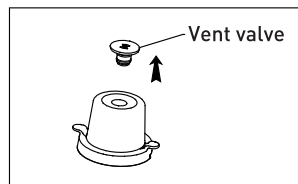

1. 清洗搅拌腔体后，取下搅拌杯组件上的透气阀：触按“功能”键选择“除菌”功能。

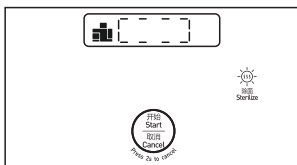


2. 触按“开始/取消”键，启动快速烘干和杀菌功能。

调速功能


1. 根据需要在搅拌腔体中加入食材和水或牛奶；
2. 触按“调速”选择档位，按“开始/取消”开始制作；
3. 变速档位分为L、1-9、H和A档。转速随着档位的逐渐增大而增大。

预约功能

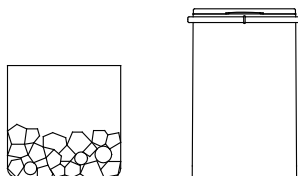


1. 加入食材

打开搅拌杯组件，加入食材，合上搅拌杯组件并顺时针旋至对位标记对齐。预约时，请在加入食材之前确保搅拌腔体干燥，并在水箱中加水至水位线以上。

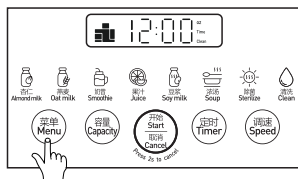


2. 选择功能

触按“功能”键，选择所需的功能进行预约。
预约仅适用于加热功能。
“果汁/奶昔”等非加热功能不能预约。

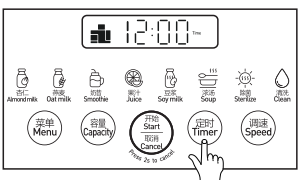

3. 时间选择

触按“预约”键，选择所需的时间每按一次，时间增加15分钟，如6小时15分钟、6小时30分钟。长按可快速增加时间。
预设时间是当地时间和制作过程完成的时间。因食材和水温偏差，会导致完成时间略有偏差，属正常现象。
若预约时间小于制浆时间，机器将无法预约，并直接启动运行工作。

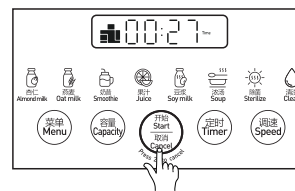


4. 启动功能

触按“开始/取消”键后，机器开始倒计时；长按“开始/取消”键，取消当前制作功能并重新选择。


清洗和保养

清洗搅拌杯体

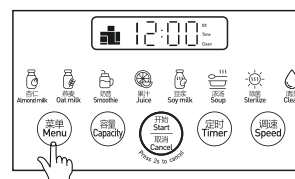

1. 选择功能

触按“功能”键，选择“自清洗”功能。首次选择“自清洗”功能时，屏幕将显示20分钟深度自清洗时间；深度自清洗时可在杯中加入茶垢清洁剂。第二次选择“自清洗”功能时，屏幕会显示5分钟快速清洗时间。

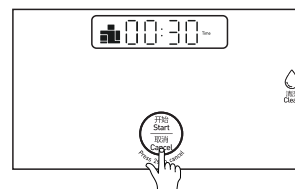


2. 开始清洗

触按“开始/取消”键后，机器会开始倒计时。


保养

1. 机器使用约30次后，通电后“自清洗”功能会闪烁，表示需要深度清洗保养。建议在搅拌腔体中加入适量茶垢清洁剂（约8克），触按“启动/取消”键，机器开始清洗。每次清洗完成后，请将机器各处擦拭干净，晾干后再存放。请勿使用小苏打和洗洁精等发泡剧烈的洗涤助剂！


2. 请定期清理搅拌杯组件，将透气阀取出进行清洗。

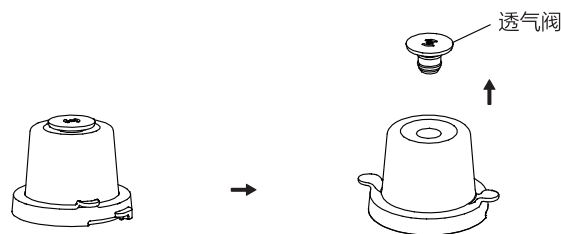


3. 请定期对出浆口进行清理，擦拭干净。

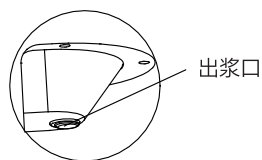

清洗配件

 


接浆杯和杯盖

 

水箱和水箱盖



 余水盒和余水盒盖



搅拌杯组件

1. 以上4个配件可从机器上拆下，放在水龙头下冲洗！
2. 食材过多或异常断电导致制作功能中断时，机器会启动自动进水，切勿再次选择相应功能进行二次制作！请选择“调速”功能，将搅拌腔体中的食材粉碎后排出，再触按“功能”，选择“自清洗”功能进行自动清洗。
3. 制作饮品后，应时常对搅拌杯组件的蒸汽口进行清理，以免产生异味，滋生细菌。清洗后，要将搅拌杯组件擦干，避免内部进水。
4. 建议在组装成整机之前，将所有部件擦干或风干。将机器存放于干燥通风的地方。

故障现象

故障现象	原因分析	解决方案
显示屏不亮	电源线未插好	将电源线插好
	机器显示板故障	请联系客服
	长时间未操作，机器进入休眠模式	用手指轻触按键，唤醒机器
显示屏亮，但机器不工作	未选择功能程序	选择相应的功能程序
	水箱内未加水或旋转不到位	水箱加水至水位刻度线并放置到位
搅拌腔体不进水	水泵异常	请联系客服
	水箱底部过滤网堵塞	请联系客服
电机不停运转	机器内进水	请联系客服
机器不停加热	温度传感器异常	请联系客服
触摸无反应	断电间隔太短，系统未复位	断电2分钟后再通电使用
	显示板按键故障	请联系客服
食材打不碎	食材太多或太少	请按食谱用量要求加入食材
	机器自身故障	请联系客服
	选错功能程序	正确选择功能程序

故障现象	原因分析	解决方案
溢出	选错功能程序	正确选择功能程序
	食材太多或太大	请按说明书的食谱用量加入食材
	机器自身故障	请联系客服
	透气阀堵塞	清理透气阀
饮品加工时间过长, 其他正常	水温过低	使用常温水
	选错功能程序	正确选择功能程序
浆液未正常排在接浆杯内	接浆杯放置不到位	将接收杯放置到位
	排浆阀异常	请联系客服
废水未排在余水盒内	余水盒放置不到位	将余水盒放置到位
	排浆阀异常	请联系客服
异常哨音	机器磨合	偶有哨音属正常现象
食材排不完	食材放置过多	请按食谱指导放置食材
异常断电		通电后, 整机复位。使用“调速”功能将腔内食材粉碎后排出。清洗后可重新添加食材进行制作

故障代码

报错提示: 触摸屏上会显示报错提示和解决方案

异常代码	原因说明	建议对策
E02 (CUP)	1. 搅拌杯组件没有盖上; 2. 若接浆杯未放置到位, 或者排余水时未取出接浆杯, 故障灯会闪烁指示, 数码管显示CUP	1. 旋紧搅拌杯组件; 2. 按说明书正确放置接浆杯
E03/E04	高/低电压信号异常	家庭电压异常。请稍后再试
E051	杯体NTC开路	产品故障, 请联系客服
E061	杯体NTC短路或大于150℃	产品故障, 请联系客服
E07	控制板与电源板通信异常	产品故障, 请联系客服
E08	电机无电流, 或霍尔信号异常	拔掉电源静置五分钟以上, 重新开机, 选择“调速”功能键, 再触按“启动/取消”键操作, 即可排出食材。“调速”功能结束后, 选择“自清洗”功能进行自动清洗。清洗后, 请按食谱重新制作。若还有问题, 请联系客服
E10	8档以上加热, 无电流	静置10分钟, 然后重新打开电源。若故障还在, 请联系客服
E12	待机状态有电流	产品故障, 请联系客服
E13	加热时无法达到指定温度。 加热20分钟后, 未能达到85℃	请重新制作
E25	转阀转动故障	产品故障, 请联系客服

异常代码	原因说明	建议对策
E28	水泵抽水空抽， 主要原因是水箱缺少	往水箱中加水至所需水位线以上
E33	水泵故障	产品故障，请联系客服
E37	电磁铁电流异常	产品故障，请联系客服
E38	食材添加过多	使用“调速”功能，将食材粉碎后排出腔体。清洗后可重新添加食材进行制作

提示:

如不能解决问题，切勿私自拆卸机器。如因型号或零部件变更导致以上内容与实物不符，请以实物为准，恕不另行通知，敬请谅解。

PREFACE

Thank you for choosing our Hands-free Washing Blender. We have written this manual to aid you in using and maintaining this product safely and properly. Please read this manual carefully before using, and keep it for your reference.

IMPORTANT SAFEGUARDS

Safety use

Prohibition

1. The product is designed for domestic use only.
2. Do not put the appliance base and cable into dishwasher machine.
3. Never immerse the base into or swash it with water or other liquid to prevent any damages to the product.
4. Do not place this product near high temperature, strong magnetic material, or in flammable or explosive gas such as natural gas, methane, etc.

Warning

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Wait till it's cool down cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of attachments, including canning jars, is not recommended by the manufacturer as it may cause a risk of injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over the edge of tables or counters, or touch hot surfaces.
10. Do not place on or near hot gas or a electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for non-intended use.
14. Do not attempt to force-open any safety interlock mechanisms.
15. This product is not intended to be used by persons (including children) with physical, sensory, mental disability or lack of experience and knowledge of use, unless they are supervised or directed by a person responsible for their safety about the use of the appliance. Please note that children are prevented from playing with this product.
16. Please use a three-plug socket and ensure reliable grounding. Be sure to choose the power socket with the rated current not less than 10A and AC voltage of 120V.
17. Be sure to plug the power into the socket. If not fully inserted, it may cause a fire accident due to electric shock or overheating.
18. Do not use for purposes other than those specified in the manual.
19. Never try to modify, disassemble or repair the product by yourself.
20. Do not immerse the product in water or swash with water.
21. Do not apply external force on the pulp spout to avoid damage to the machine.
22. It is prohibited to process mango, licorice or other ingredients with too much fiber, so as not to block the pulp spout and damage the machine.
23. It is forbidden to use the receiver cup that does not come with the machine.

Notes

1. Do not open the mixing cup assembly during working or when the pulp is not completely discharged, so as to avoid burns due to overflow!
2. When the room temperature is higher than 30°C, the preset time should not exceed 12 hours.
3. Do not put the receiver cup on an open flame or heat on the induction cooker.
4. When the program are finished, the temperature of the receiver cup, the receiver cup outlet, stirring cavity and mixing cup assemb is high. Do not touch them directly with your hands.
5. If there are uncrushed ingredients in the stirring cavity that need to be discharged, please select the "Speed" function on the main interface to directly discharge the uncrushed ingredients.
6. Please add ingredients according to the recipe when making drinks.



7. Do not power off during the automatic cleaning process.
8. For preset, there is a slight difference between preset time and actual making time, which is normal and does not affect the quality of the drinks.
9. There may be a deviation between the actual making time and the on-screen making time, which is normal.
10. During making process, do not remove the receiver cup by force.
11. Do not drink beverages made of a malfunctioning machine.
12. Before automatic cleaning, please ensure that the residual water box is in place.
13. After adding ingredients to the stirring cavity, please clean the ingredients around the cavity edge to avoid failure to seal the lid.
14. Making with colored ingredients might cause a stain.
15. This product is only used in the environment with temperature between 4°C-40°C.
16. For food ingredients with the core, please remove the core before making.
17. Working time will be automatically adjusted according to altitude and voltage. When the cleaning is done, open the mixing cup assembly to dry up.
18. When making rice drinks, rice will slightly stick to the stirring cavity, which is normal.
19. When the machine is powered on and working, it is strictly prohibited to touch the blade, motor, and other movable parts, to avoid injury or damage to the machine.
20. It is prohibited to use this product empty (no ingredients in the cup) or overloaded (the amount of ingredients exceeds the rated value).
21. This product is for household use only. Do not use it for other purposes.
22. Please don't plug or unplug the power plug with wet hands to avoid electric shock. Please hold the plug with your hand and pull it out when disconnecting the power supply. Do not pull the power cord. Do not touch the power cord with sharp edges, sharp corners, etc., to avoid damage and leakage.
23. Please place it on a stable table when using this product. Please do not operate the product on an inclined or unstable table or near flammable items such as carpets, towels, plastics, paper, etc., and keep away from the edge of tables to avoid falling or other accidents.
24. It is strictly prohibited to move the machine in the process of working, to avoid the overflow of ingredients, which may cause burns or electric shock.
25. If the power of the machine is interrupted during the working process, please select the "Speed" function to crush and discharge the ingredients after the power is restarted. After cleaning, replace the ingredients, do not re-select the function to continue working, otherwise it will cause overflow.

26. If the power cord is damaged, it must be replaced by a professional from the manufacturer avoid danger.
27. Please turn off the switch and disconnect the power supply when not in use to avoid short circuit of the product.
28. The component materials in contact with food of the machine have passed the food grade certification, which are clean, sanitary and reliable.
29. Please refer it to a qualified department for recycling when discarding this product and its packaging. Please cut off the power cord when discarding.
30. The running speed of the product has been set to the ideal state, which does not need to be adjusted.
31. Please turn off the switch and disconnect the power supply to avoid Leakage or accidental start of the product before disassembling, installing, adjusting or cleaning any parts of this product.
32. Turn off the power switch and disconnect the power before replacing parts or touching moving parts.
33. The continuous stirring time of the product shall not exceed 6 minutes (refer to the recipe instructions and display instructions for the running time of each program) and it is necessary to stop the machine for 1 minute after each making. The above is a cycle. The power supply must be cut off, and the operation must be carried out after cooling for 15 minutes to ensure the product life after continuous operations for 3 cycles.
34. The machine must be kept more than 30cm away from fire to avoid damage to the machine or fire hazard.
35. Because the glass stirring cavity is easy to break, please use and handle it with care. If any damage is found, please stop using immediately to avoid danger.
36. The air outlet on the cup lid or feeding cover must be cleaned, and it is strictly forbidden to block it, so as to avoid splashing and other accidents.
37. Large or long strips of ingredients should be divided into small pieces or as required in the recipe.
38. Do not place the machine against the wall while pulping.
39. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Flashing light indicates ready to operate. Avoid inadvertent contact with the touch screen.
40. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

41. Blade assembly is sharp, not locked in place and removable. Handle with care. When handling blade assembly, always hold by the shaft. To avoid a risk of injury when pouring with the cover removed, be careful with the blade assembly.
42. Always operate blender with cover in place.
43. Allow to cool before assembling or disassembling parts and before cleaning the appliance.
44. Never add to the mixing cup while appliance is operating.
45. The mixing cup must be properly in place before operating appliance.
46. In order to ensure the taste of soy milk, please limit the soaking time of dry beans within 8 hours. Do not oversoak to avoid slurry overflow.

SAVE THESE INSTRUCTIONS.


COMPONENTS AND FUNCTIONS

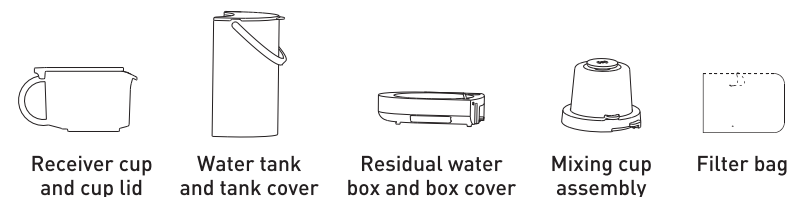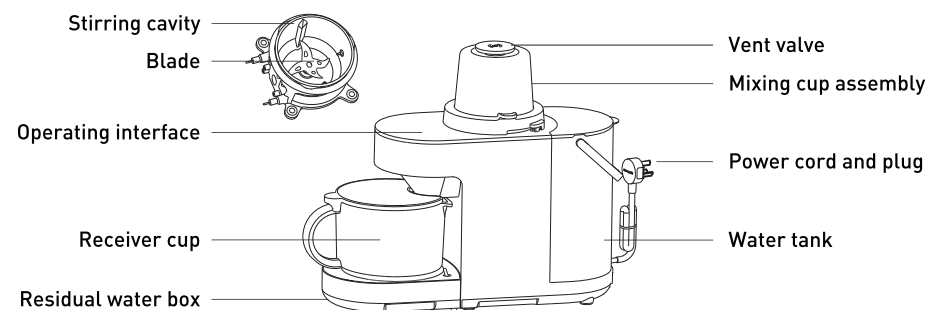

QUICK PRODUCTION GUIDE

Installation instructions

- ① Add water in the water tank to the level of the required pulping amount, put on the water tank cover, and install in place as instructed;
- ② Install the residual water box in the appropriate position;
- ③ After that, install the receiver cup and cup lid in place;
Notes: The handle of the cup should face outwards, otherwise the bottom magnet cannot be sensed.
- ④ After adding ingredients, place the mixing cup assembly in the corresponding position (turn clockwise until the position mark is aligned);

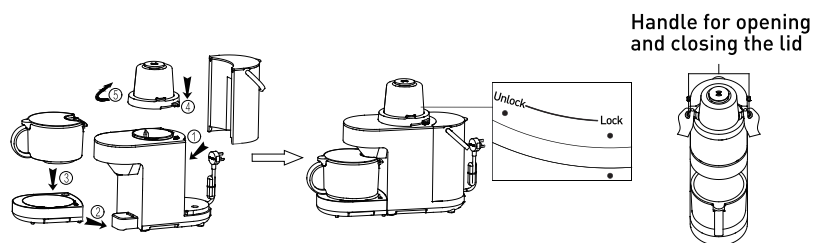


- ⑤ After pulping is completed, the machine enters the self-cleaning process. Please remove the receiver cup.

PRODUCT SAFETY INDICATORS

Rated Voltage	120V~
Rated Frequency	60Hz
Heating Power	1000W
Motor Power	450W
Rated Capacity	300mL-1200mL

HOW TO USE

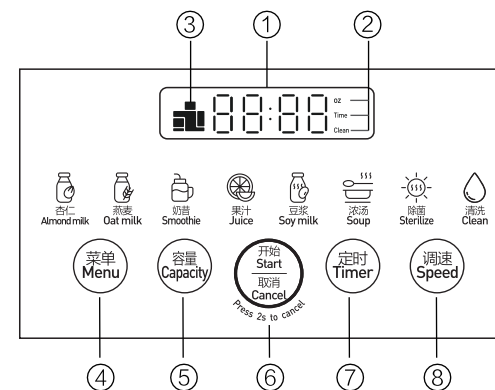


1. LED time/capacity display
2. Status display (Oz、Time、Clean)
3. Prompt of abnormalities
4. Function selection key
5. Capacity selection key
6. Start/Cancel key
7. Preset key
8. Speed key


Note:

The machine displays --:-- in the standby state, and it will display the working time as working time after the function starts.

INSTRUCTION OF USE

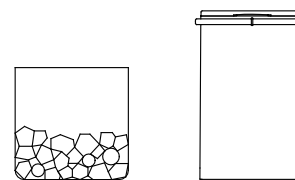

1. **Install the whole machine**
Assemble the whole machine as stated in the installation instructions;
2. **Add ingredients and water**
Open the mixing cup assembly, add ingredients, close the mixing cup assembly and turn clockwise until the position mark is aligned.

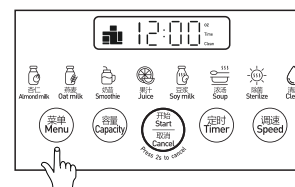


3. **Select function**
Press the "Menu" key to select the required function.

Speed function


1. Add ingredients and water or milk to the stirring cavity as needed;
2. Press "Speed" to select gear, and press "Start/Cancel" to start working;
3. Speed gears are divided into L, 1-9, H and A. The speed increases with the gradual increase of the gear.

Preset function

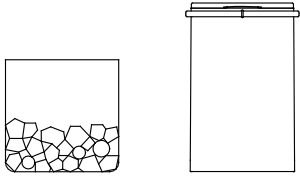


1. Add ingredients

Open the mixing cup assembly, add ingredients, close the mixing cup assembly and turn clockwise until the position mark is aligned. For preset, please ensure that the stirring cavity is dry before adding the ingredients, and add water above the level mark in the water tank.

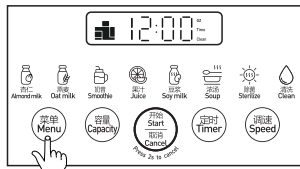

2. Select function


Press the "Menu" key to select the desired function to preset. Preset only applies to the heating function. "Juice/Smoothie" and other non-heating functions cannot be preset.

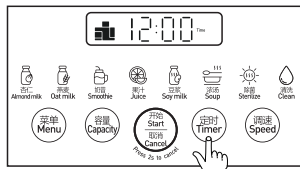

3. Time selection

Press the "Timer" key to select the desired time. For each press, the time will increase by 15 minutes, such as 6 hours and 15 minutes, 6 hours and 30 minutes. Long press can quickly increase the time.

The preset time is your local time and the time when the production process is completed. Deviation of ingredients and water temperature will lead to a slight deviation in the completion time, which is a normal phenomenon. If the preset time is shorter than the pulping time, the machine will start working directly without preset.

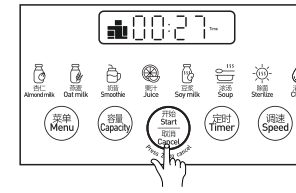


4. Start function

After pressing the "Start/Cancel" key, the machine starts the countdown; Long press the "Start/Cancel" key to cancel the current making function and re-select.


Cleaning and maintenance

Clean the stirring cup body

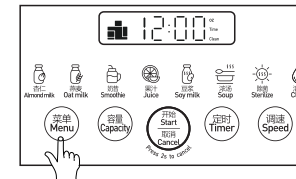

1. Select function

Press the "Menu" key and select the "Clean" function. When the "Clean" function is chosen for the first time, the screen will display 20 minutes for deep cleaning; Tea stain cleaner can be added to the cup for deep cleaning. The second time you choose "Clean" function, the screen will display 5 minutes for quick washing.

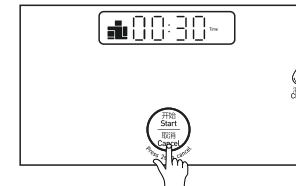


2. Start cleaning

After pressing the "Start/Cancel" key, the machine starts the countdown.


Maintenance

1. After about 30 times of use, the "Clean" function will flash after the machine is powered on, indicating the need of deep clean for maintenance. It is recommended to add an appropriate amount of tea stain cleaner (about 8 g) to the stirring cavity and press "Start/Cancel", and the machine will start cleaning. After each cleaning, please wipe all parts of the machine clean and dry before storage. Do not use baking soda, detergent, and other cleaning aids that can produce intense foaming!


2. Please clean the mixing cup assembly regularly, take out and clean the vent valve.

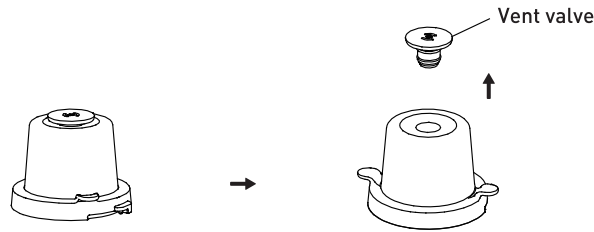

3. Please clean and wipe the pulp outlet at regular intervals.

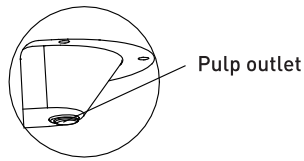

Clean parts

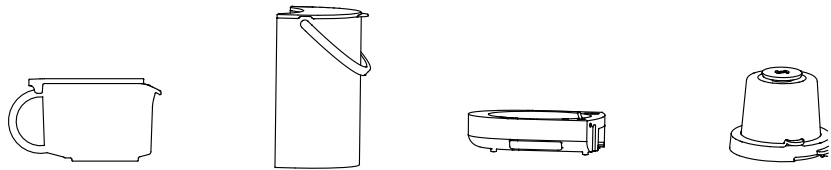

Receiver cup and cup lid

Water tank and tank cover

Residual water box and box cover

Mixing cup assembly

1. The above four parts can be taken down and rinsed under the faucet!
2. If the making process is interrupted due to excessive ingredients or abnormal power failure, the machine will start the automatic water inflow and please do not the corresponding function for the second making! Select the "Speed" function to crush and drain the ingredients in the stirring cavity, and then press the "Menu" to select the "Clean" function for automatic cleaning.
3. After making the drink, the steam outlet of the mixing cup assembly should be cleaned from time to time, to avoid odor and bacteria. After cleaning, dry the mixing cup assembly to avoid water inflow.
4. It is recommended to dry or air-dry all the parts before assembling them into the whole machine. And please store the machine in a dry and ventilated place.

Fault phenomenon

Fault phenomenon	Analysis	Solution
Display screen doesn't light up	The power cord is not plugged in properly	Plug the power cord properly
	Machine display board out of order	Please contact customer service
	The machine has entered the sleep mode because it had not been operated for a long time	Touch the key with your finger to wake up the machine
The display is on but the machine is not working.	Function is not selected	Select the appropriate functional program
	The water tank is not filled with water or set in place	Fill water in the water tank to the water level scale and put it in place
Water cannot enter the stirring cavity	Water pump is abnormal	Please contact customer service
	The filter screen at the base of the water tank is blocked	Please contact customer service
The motor keeps running without stopping	Water gets into the machine	Please contact customer service
The machine keeps heating without stopping	The temperature sensor is abnormal	Please contact customer service
No response to touch	The interval of power-off is too short for the system to reset	Power off for 2 minutes before use
	Display board key is out of order	Please contact customer service
The ingredients cannot be smashed	Too many or too few ingredients	Please add the ingredients according to the amount in the recipe
	Malfunction of the machine itself	Please contact customer service
	Selected the wrong function	Select function correctly

Fault phenomenon	Analysis	Solution
Overflow	Selected the wrong function	Select function correctly
	Too many or too large ingredients	Please add the ingredients according to the recipe amount in the manual
	Malfunction of the machine itself	Please contact customer service
	Vent valve is blocked	Clean the vent valve
Working time is too long, others normal	The water temperature is too low	Use normal temperature water
	Selected the wrong function	Select function correctly
The liquid is not normally discharged in the receiver cup	The receiver cup is not in place	Put the receiver cup in place
	The discharge valve is abnormal	Please contact customer service
The waste water is not discharged into the residual water box	The residual water box is not put in place	Put the residual water box in place
	The discharge valve is abnormal	Please contact customer service
Abnormal whistle	The machine running in	Occasional whistling is normal
The ingredients cannot be discharged completely	Too many ingredients are put into the machine	Please put in the ingredients as instructed in the recipe
Abnormal power off		After the power is on, the whole machine is re-set. Use the "Speed" function to crush and drain the ingredients from the cavity. After cleaning, the ingredients can be added again for making

Error code

Error notification: The error notification and solution are displayed on the touch screen

Abnormal code	Cause description	Proposed countermeasures
E02 (CUP)	1. The mixing cup assembly is not covered; 2. If the receiver cup is not in place or if the receiver cup is not removed when the residual water is discharged, the fault light will indicate by flashing, and the digital tube will display CUP	1. Tighten the mixing cup assembly; 2. Correctly put the receiver cup according to the instructions
E03/E04	The high/low voltage signal is abnormal	The home voltage is abnormal. Please try again later
E051	Cup body NTC open circuit	For product breakdown, please contact customer service
E061	Cup body NTC short circuit or greater than 150°C	For product breakdown, please contact customer service
E07	Communication between the control panel and power panel is abnormal	For product breakdown, please contact customer service
E08	No motor current, or abnormal Hall signal	After unplugging the power and letting it stand for more than five minutes, turn it on again and select the 'Speed' function key and then press the 'Start/Cancel' key to operate, so that the ingredients can be discharged. After the 'Speed' function ends, select the 'Clean' function for automatic cleaning. After cleaning, please remake according to the recipe. If there is still a problem, please contact customer service
E10	There is no electric current when heating above gear 8	Leave it for 10 minutes and then power it on again. If the fault still occurs, please contact customer service
E12	There's electric current in the standby state	For product breakdown, please contact customer service
E13	Unable to reach the specified temperature when heating. Fail to reach 85°C after 20 minutes of heating	Please make it anew
E25	Rotating valve out of order	For product breakdown, please contact customer service

Abnormal code	Cause description	Proposed countermeasures
E28	The water pump works abnormally due to the water tank is lack of water	Add water to the water tank above the required water line
E33	The water pump breaks down	For product breakdown, please contact customer service
E37	Abnormal current of the electromagnet	For product breakdown, please contact customer service
E38	Too many ingredients	Use the "Speed" function to crush and drain the ingredients from the cavity. After cleaning, the ingredients can be added again for making

Tips:

If the problem cannot be solved, do not dismantle the machine without permission. If the above contents are inconsistent with the physical object due to the change of model or parts, the latter shall prevail, without prior notice. Please understand.